

Installation Manual


Zigbee Wireless Dimmer Switch I 1 zone Productcode 50208689



Important: Read All Instructions Prior to Installation

Function introduction

Press and hold down both keys together to search and pair to ZigBee network or factory reset the dimmer switch.

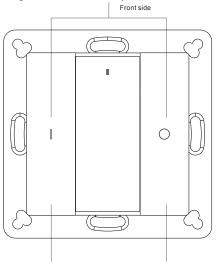


Click to turn on the paired lighting devices, press and hold down to increase light intensity

Click to turn off the paired lighting devices, Press and hold down to

decrease light intensity

Note: This switch supports 1 group for binding max. 30 lighting devices.

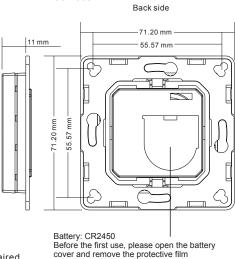

Product Data

Protocol	ZigBee 3.0
Operation Voltage	3VDC (CR2450)
Transmission Frequency	2.4GHz
Transmission Range (free field)	30m
Protection Type	IP20
Dimming Range	0.1%-100%
Dimensions	71.2x71.2x13.6mm

- ZigBee dimmer switch based on ZigBee 3.0
- Enables to pair ZigBee lighting devices via touchlink commissioning without coordinator
- Supports find and bind mode to pair with ZigBee lighting devices in the same network
- Supports 1 group for binding max. 30 lighting devices
- 2.4 GHz global operation
- · Long battery life mesh technology
- Transmission range up to 30m
- · Compatible with universal ZigBee Gateway products
- Compatible with universal single color ZigBee lighting devices


ZigBee Clusters Supported by This Remote Are As Follows: Input clusters:

- Basic Power Configuration Identify Diagnostics
 Output clusters:
- Identify On/off Level control Ota

- Safety & Warnings
- This device contains a button lithium battery that shall be stored and disposed properly.
- · DO NOT expose the device to moisture.

Quick Start (Simplified operations compared to standard operations in the part "Operation")

Network pairing mode: click both buttons 3 times (the remote should not belong to any gateway network).

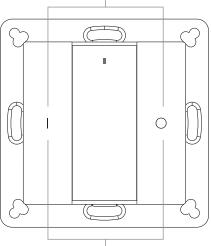


Factory reset: click both buttons 3 times (the remote should already be paired to a gateway).

Operation

- 1. This ZigBee dimremote is a wireless transmitter that communicates with a variety of ZigBee compatibles ys tems. This transmitters ends wireless radiosignals that are used to remotely control a compatible system.
- $2. This\ ZigBee\ remote\ supports 1\ group for binding\ max. 30 lighting\ devices\ a\ ndenables to\ control\ singlecolor\ ZigBeelighting\ devices\ .$
- 3. Zigbee Network Pairing through Coordinator or Hub (Added to a Zigbee Network)

Step 1: Remove the remote from previous zigbee network if it has already been added to it, o therwise pairing will fail. Please refer to the part "Factory Reset Manually".

Step 3: Press and hold down both until LED indicator turns on.

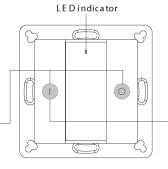


Step 2: From your zigbee controller or hub interface, choose to add device or accessory and enter Pairing mode as instructed by the controller.

Step 4: Immediately short press to search nearby network, indicator flashes every 1 s econd, 20 seconds timeout if there is no network. Indicator will then blink 5 times quickly for successful pairing.

Note: 1) After pairings uccess fully, the remote information will appear on the controller or hubin terface.

2) Noremote information will appear on the hubin terface if pairing to Philips Hue Bridge.


4. TouchLink to a Zigbee Lighting Device

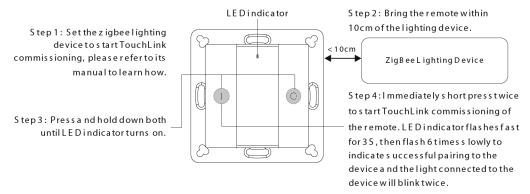


 $Note: 1) Directly\ Touch Link (both not added to a\ ZigBee\ network), each remote can link with 30 devices.$

- 2) Touch Link a fterboth added to a ZigBeen etwork, each remote can link with max. 30 devices.
- ${\tt 3}\) For Hue\ Bridge \&\ A mazon\ Echo\ Plus, addremote and device to network first then\ Touch Link.$
- $4\) After Touch Link, the remote can control the linked lighting devices. \\$


5. Removed from a Zigbee Network through Coordinator or HubInterface

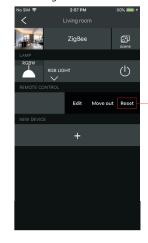

From y our ZigBeecontroller or hub interface, choose to delete or reset the remote as instructed, indicator flashes 3 times quickly to indicate successful removing.

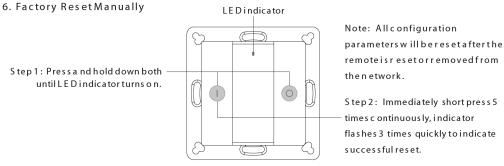


7. Remove a Touchlink Paired ZigBee Lighting Device

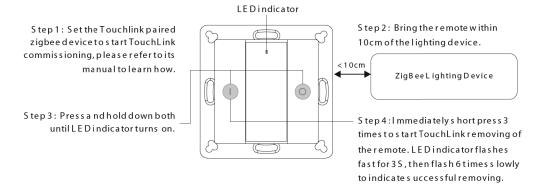


8. Factory Reseta Lighting Device (Touch Reset)

Note: the devices hall be added to an etwork, the remote added to the same one or not added to any network.

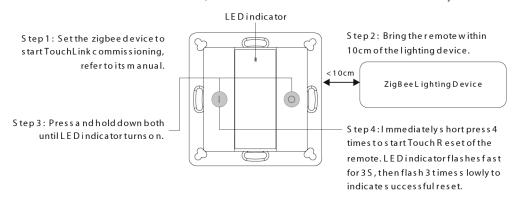


9. Find and Bind a Zigbee Lighting Device

Note: Makes ure the device and remote already added to the same zigbee network.

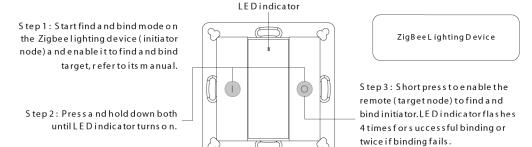


Note: Each remote can bind max. 30 lighting devices.

10. Find and Unbind a Zigbee Lighting Device

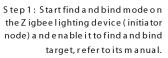


Step 2: Press and hold down both until LED indicator turns on.

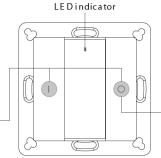

ZigB ee Lighting Device


S tep 3: Short press twice to enable the remote (target node) to find and unbind initiator. LED indicator flashes 4 times for success ful unbinding or twice if unbinding fails.

11. Clear All Find and Bind Mode Paired Lighting Devices

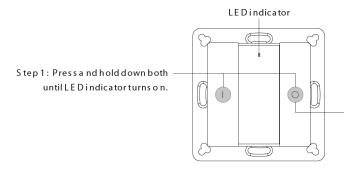

Step 2: Short press 5 times continuously to clear all bound lighting devices. LED indicator flashes 4 times for successful unbinding.

12. Setupa Network & Add Devicest othe Network (NoCoordinator or Hub Required)

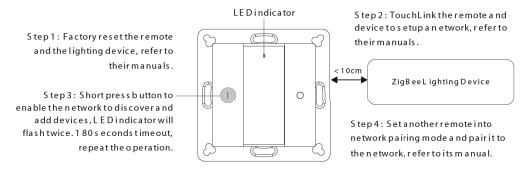

Step 5: Add more remotes to the network asy ou would like.

Step 6: Factory reset the lighting devices that you would like to add to the network, refer to their manuals.

Step 7: Touchlink to pair the added remotes and lighting devices you would like to add, the devices will be added to the network through Touchlink, refer to their manuals.

13.0 TA

The remote supports firmware updating through OTA, and will a cquire new firmware from zigbee controller or hub every 10 minutes a utomatically.

14. How to Check Whether the Remote Belongstoa Network or not

Short press any button, indicator blinking means the remote has a Iready been added to an etwork. No blinking of indicator means: he remote does not belong to any network.

15. Battery Power Monitor Function


The remote will report battery power value to the coordinator underfollowing situations:


- · When powered on.
- When short pressing both | a nd | buttons simultaneously.
- When operating the s witch to s end data packets (over 4 hours s incelast operation).
- When a dded to the network by a coordinator.

Installation


1. Remove battery insulator



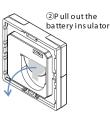

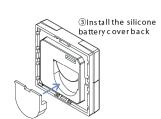

2.Install the controller to wall (2 methods)

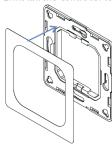

Method 1: Stick 3 M glue on the

the bracket to the wall

back of the bracket and then stick

Method 2: Screw the bracket to the wall

After the bracket is fixed, clip the frame and control part to the bracket in sequence

Mounting

The key part of this controller is a nuniversal one, especially rotary standard switch element that can be integrated in numerous frames by different manufactures as below list:

BEKER	S 1, B 1, B 3, B 7 g lass
GIRA	S tandard55, E 2, E vent, E s prit
JUNG	A500, Aplus
MERTEN	M-s mart, M - Arc, M - Plan